


D V R U S E R G U I D E

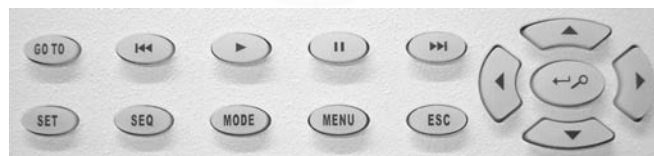

Playback

Press the key on the front of the DVR, then input the password using and . Then go to playback and press the button. Now press the button on the DVR this will now let you enter a time to replay. Use the arrows to choose the time then press . Now press to start playback. When you have finished playing back images press the button, and using the down arrow key, select 'go to end'. Then press . END will appear at the top right corner of screen, now press , the DVR will start recording; REC will appear in the top right corner of the screen.

Recording the data stored in the DVR on to a CD

To Record to a CD press the button on the DVR then input the password using the and , and go to main menu and press the button. Using the downward key go to CD-RW and press . Enter the start time on the left and the end time on the right. Now place a blank CD into the drive, select COPY and press (please see CD-Record times) your CD will now copy. To return to main menu press 3 times, REC will appear in the top right corner of the screen.

CD RECORD TIMES

The following table outlines how much video you should be able to store on a CDR at different frame rates. (Higher frame rates take up more space on the CD). The times here are approximate, and are based on using an 80 minute CD at super quality.

Your DVR's frame rate is set to

Your DVR's quality is set to

Frame rate	Time
50	8 mins
25	16 mins
12.5	32 mins
6.25	64 mins
5	79 mins
2.5	158 mins

Distributed by:

